

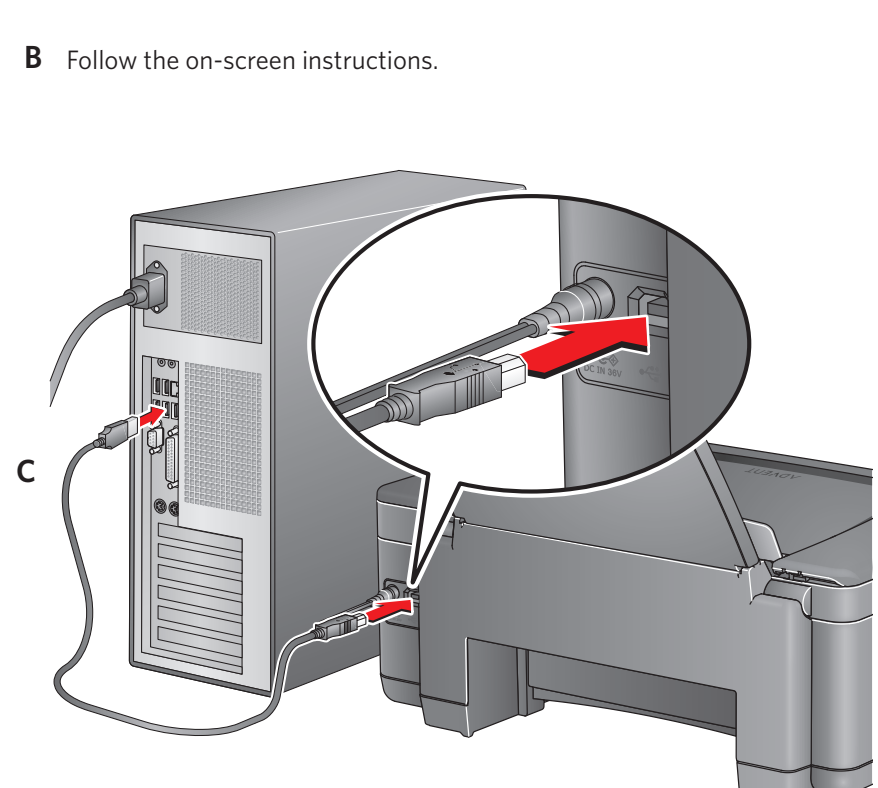
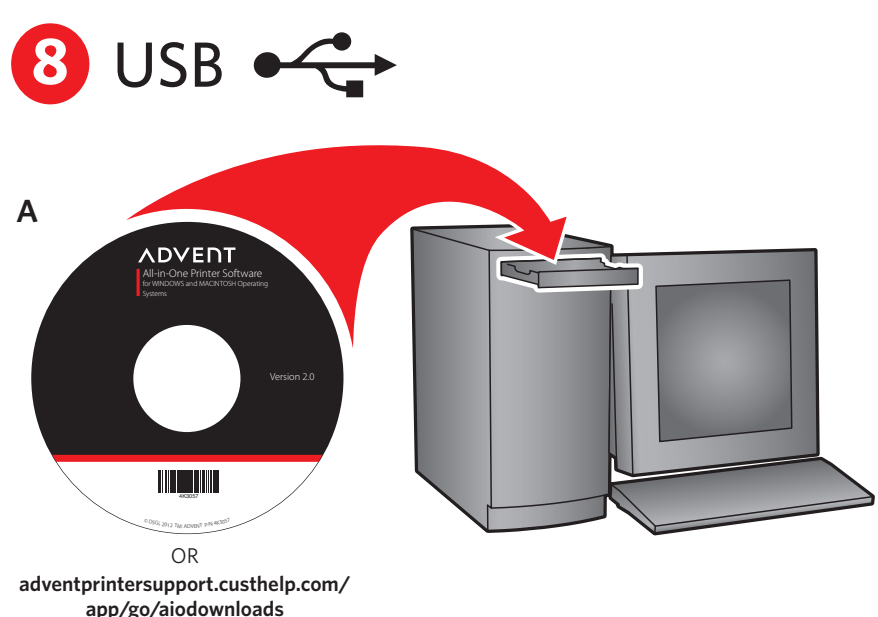
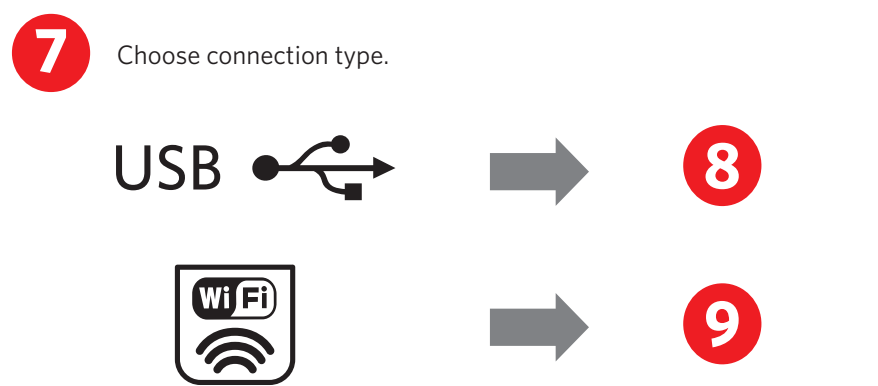
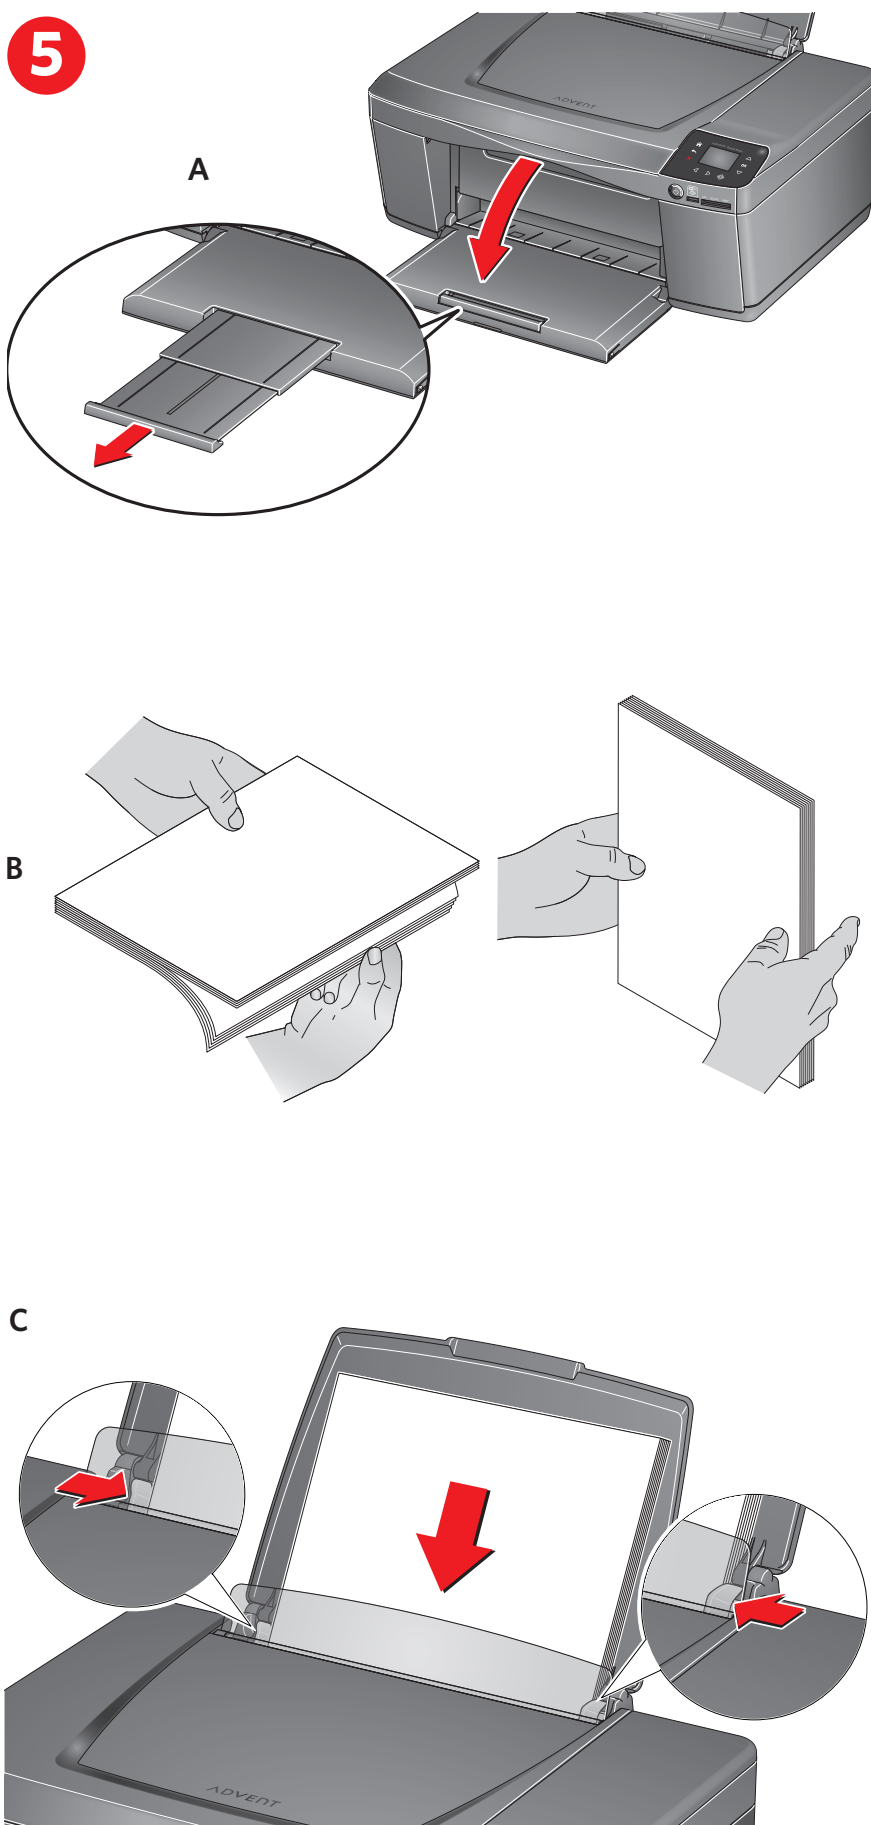
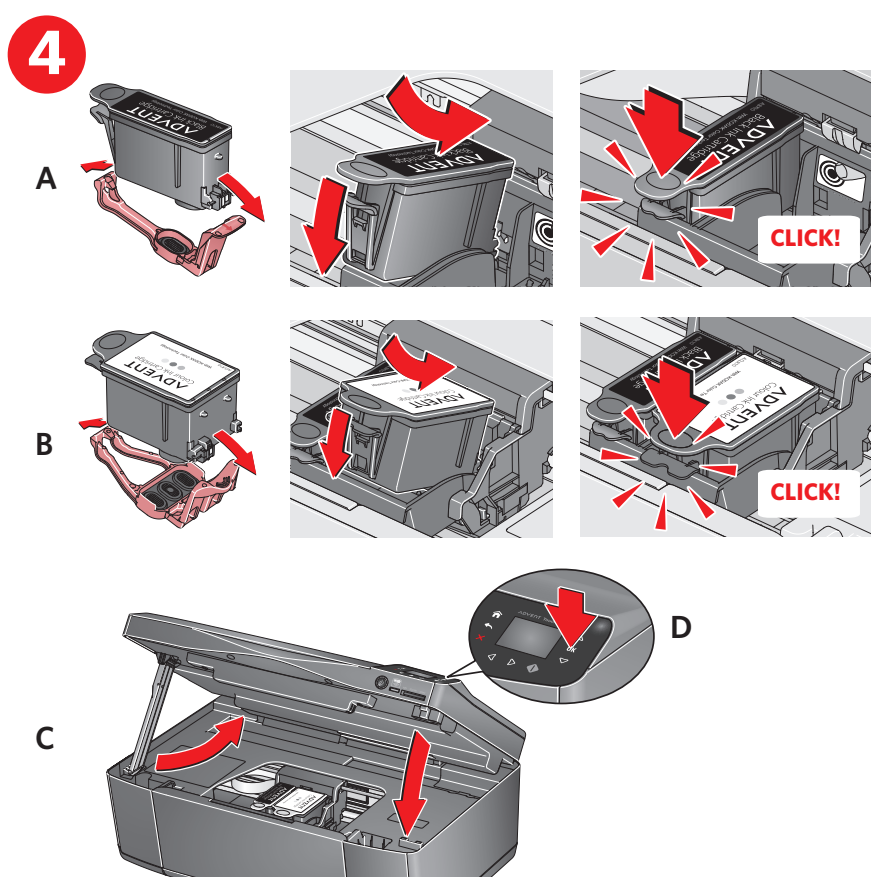
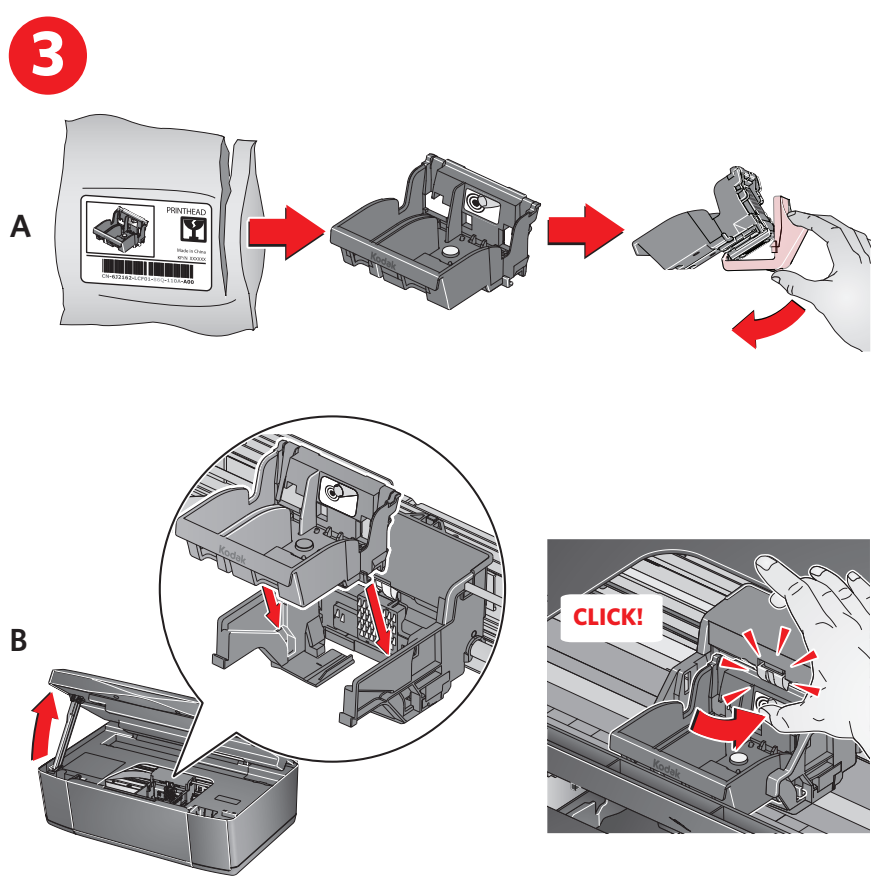


ADVENT
Touch Print All-in-One Printer

Start
Here

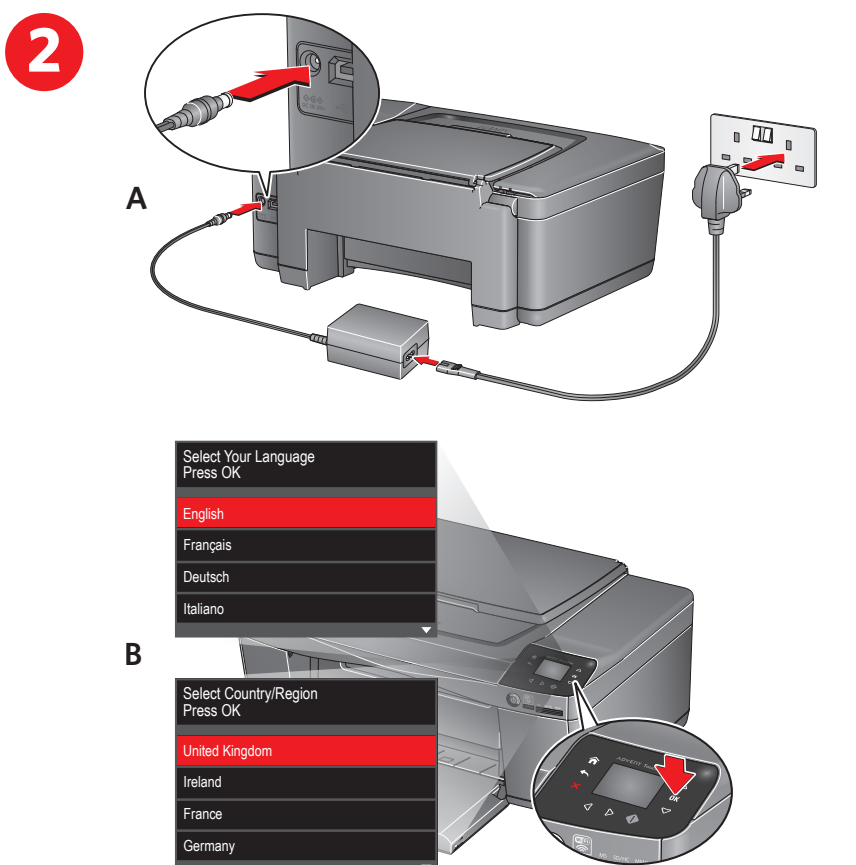

4K3075

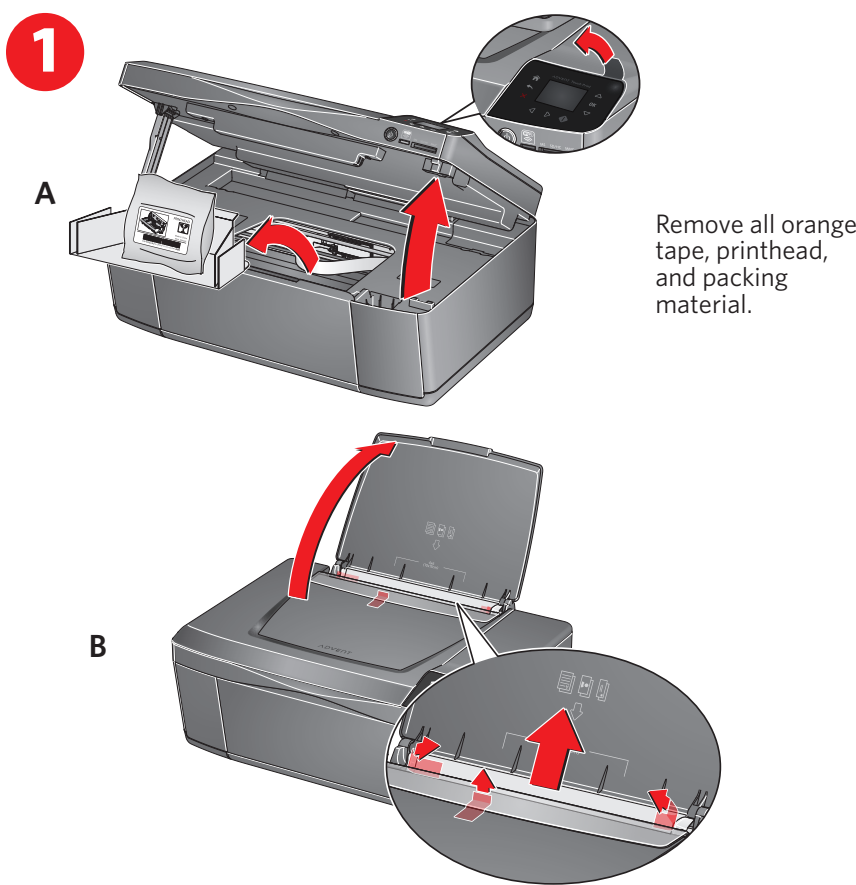

Getting Started

For information about using your printer, see the User Guide or Extended User Guide online at adventprintersupport.custhelp.com.

Print from anywhere!

- Print from your smartphone, tablet, or computer using Google Cloud Print™ enabled apps.*
- Send documents to your printer using KODAK Email Print Service and any email account.*

To set up these features, go to adventprintersupport.custhelp.com/app/go/cloudsetup. For information about using these features, see the Extended User Guide at adventprintersupport.custhelp.com/app/go/manuals.

* A GOOGLE Account is required. Device and printer must be connected to the Internet. Subject to service availability.

9




- To connect, you need:
- A wireless router.
 - To determine whether your router supports Wi-Fi Protected Setup (WPS). See your router's documentation.

Connect to a non-WPS wireless router


- A Record your network information:
- Network Name (SSID) _____
 - Security String (case-sensitive) _____

- B Press ▼ to select Wireless, then press OK.

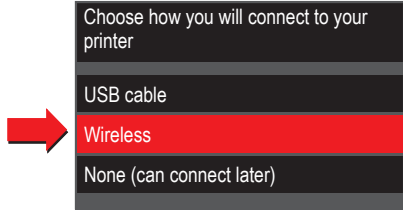


- C Press ▼ to select your network, then press OK.


- If you don't see your network in the list:
- Make sure your wireless router is turned on and within range.
 - Select Rescan for Wireless Networks then press OK.

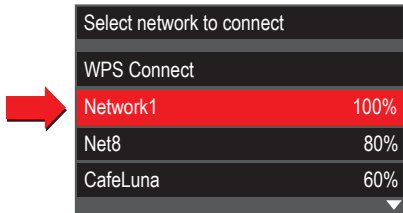

- D Enter your network password, if required.
- Use the arrow keys to select the letters, numbers, and symbols. Press OK after each selection.
 - When you are done, select DONE, then press OK.

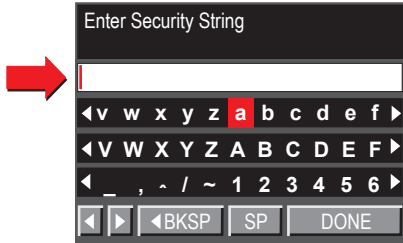


- E When the confirmation message appears, press OK. The Wi-Fi status light is on.
- NOTE: If you are unable to connect your printer, go to “Networking Your Printer” in the Extended User Guide at adventprintersupport.custhelp.com/app/go/manuals.

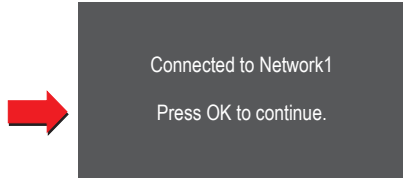


- F Go to 10

Connect to a WPS wireless router

- A Press ▼ to select Wireless, then press OK.

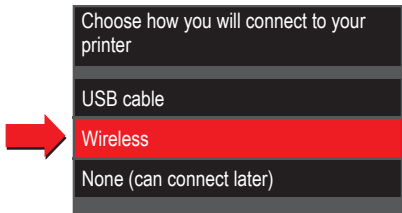


- B With WPS Connect selected, press OK.

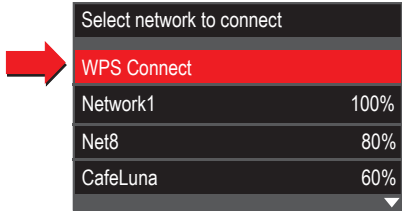

- C Select one of the following methods of connecting.
- IMPORTANT:** Make sure you know where the router's button is, or where to enter the generated PIN.

Push Button Configuration	Generate WPS PIN
NOTE: You will have two minutes to press or select the WPS button. It may be a button on the device or a virtual button in the device's software. 1. With Push Button Configuration selected, press OK. 2. Press or select the WPS button for your wireless router.	1. Press ▼ to select Generate WPS PIN, then press OK. 2. In your wireless router's software, locate the PIN screen. 3. Enter the PIN you received from the LCD into the PIN screen.


- D When the confirmation message appears, press OK. The Wi-Fi status light is on.
- NOTE: If you are unable to connect your printer, go to “Networking Your Printer” in the Extended User Guide at adventprintersupport.custhelp.com/app/go/manuals.

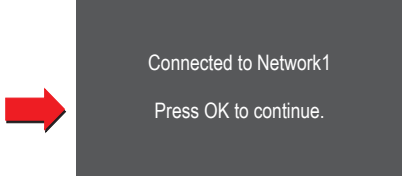

- E Go to 10

10


Follow the on-screen instructions

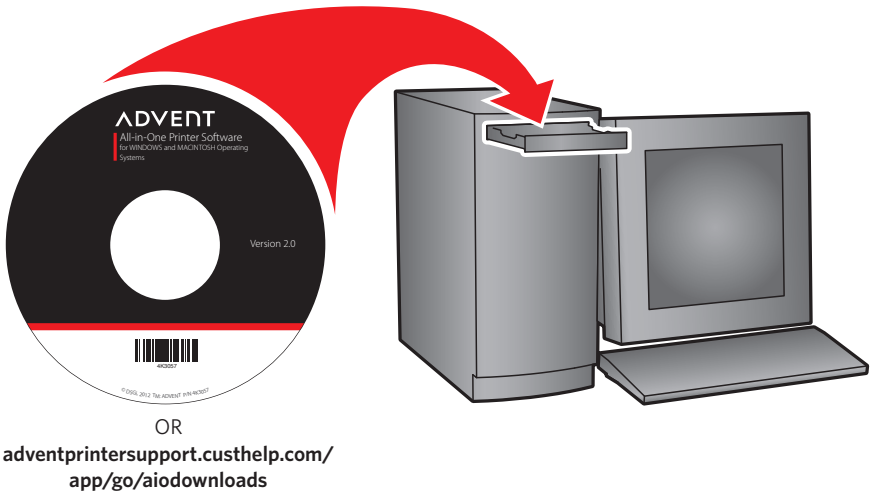

OR
adventprintersupport.custhelp.com/app/go/aiodownloads

Getting Started

For information about using your printer, see the User Guide or Extended User Guide online at adventprintersupport.custhelp.com.

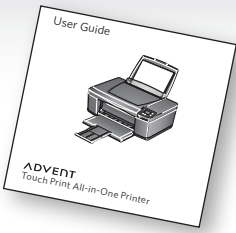

Print from anywhere!

- Print from your smartphone, tablet, or computer using Google Cloud Print™ enabled apps.*
- Send documents to your printer using KODAK Email Print Service and any email account.*

To set up these features, go to adventprintersupport.custhelp.com/app/go/cloudsetup. For information about using these features, see the Extended User Guide at adventprintersupport.custhelp.com/app/go/manuals.

* A GOOGLE Account is required. Device and printer must be connected to the Internet. Subject to service availability.